



hh simonsen®



INFINITY  
STYLER


# INFINITY STYLER

## INDEX / INDHOLD

- 02 Infinity Styler
- 04 Safety Instructions and Warranty
- 08 Brugervejledning og Sikkerhed



hh simonsen®

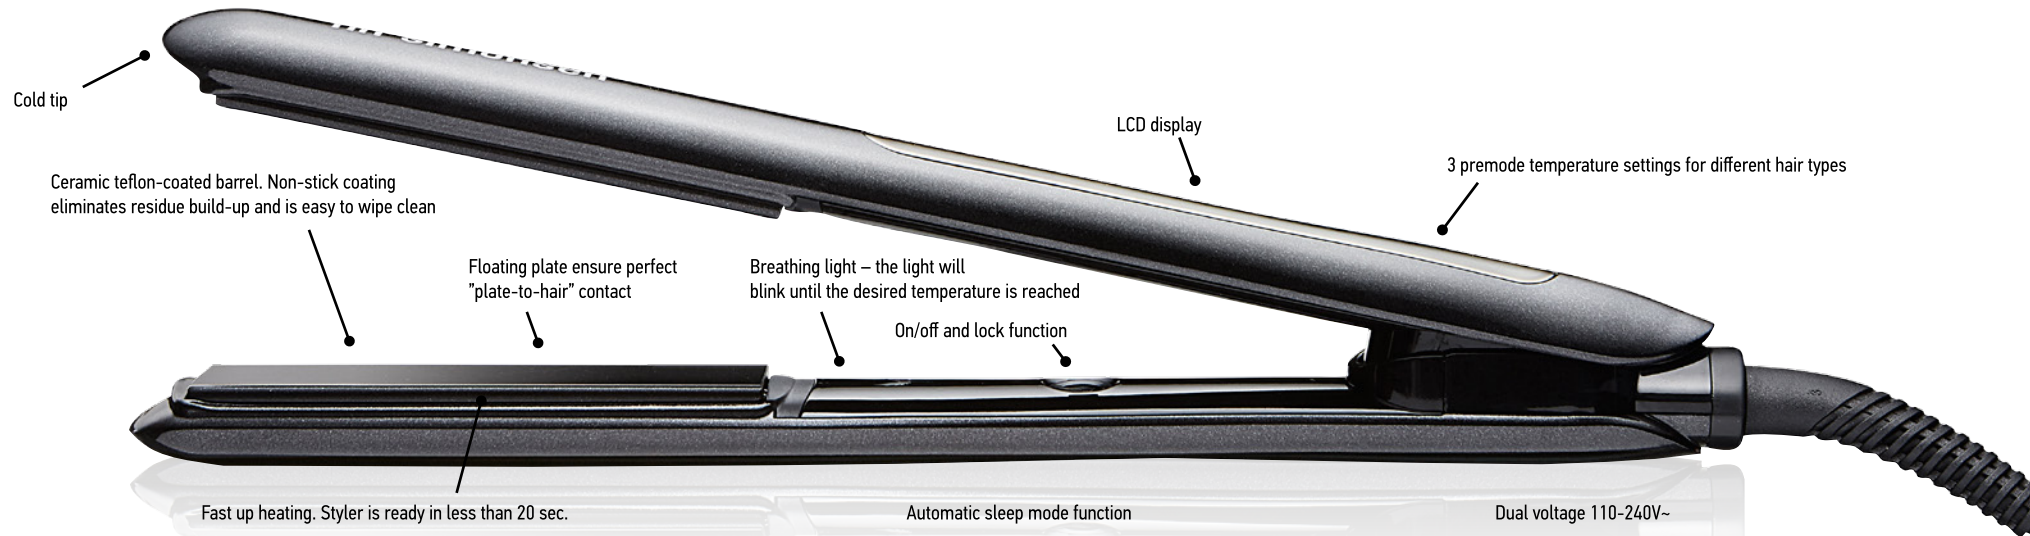



**Thank you for choosing this HH Simonsen® product.**

The exclusive Infinity Styler is everything it's name promises and more. It's a must-have styling tool for the no-compromise woman who loves the feeling of luxury. Your new styler has a number of special features giving you an extraordinary styling experience – such as a touch display and a memory function allowing you to choose between settings for fine, medium or coarse hair.

We hope you will enjoy your new Infinity Styler.

### Product information

The Infinity Styler has a temperature range from 80°C -210°C. It offers three pre-set temperature settings for fine, medium and coarse hair so you can style according to your particular hair type.

The styler will reach the desired temperature within less than five seconds.

After 60 minutes without use the straightening iron automatically goes into 'sleep mode' allowing the plates to cool down and eliminating risk of fire.

The styler's titanium coated plates with oils and tourmaline, protecting from damage and leaving hair silky smooth and perfectly straight – even after just one stroke. The ionic technology locks in naturel oils and helps prevent hair from getting frizzy.

The floating plates specially designed by HH Simonsen® ensure a perfect plate-to-hair contact – no matter from which angle the straightening iron is used. This feature will also allow you to style a look with soft movement and curls.

Finally, the 3-meter soft rubber cord ensures that your straightening iron can reach the plug at any time.

### Power specifications:

Power 110-240V~, 50/60Hz, 50W Dual Voltage.

### 1. Safety

Before using any HH Simonsen® product please read the following instructions carefully. This will safeguard you from possible hazards and prevent the appliance from damage caused by incorrect operation. HH Simonsen® cannot be held responsible for any direct or indirect damage caused by misuse of this product.

#### 1.1 Explanation of Terms

You will find the following terms displayed in these safety notes:

**Danger: High Risk!** Failure to comply with this warning can be fatal or may result in serious injury.

#### Attention: Medium Risk

Failure to comply with this warning may result in injury or damage to the appliance.

#### Note: Low Risk

This information should be taken into account when handling the appliance.

### 1.2 General Safety

#### Danger: High Risk!

- Only use the HH Simonsen® appliance to style human hair.
- Do not use on artificial or animal hair.
- Do not use the heating elements to dry objects.
- The appliance must never be used in the bath, shower or near a filled wash basin or any other container containing liquid.
- The appliance should not be operated with wet hands.

- Do not immerse the appliance in water or rinse under dripping wet hair. When connected to the power supply, never leave the appliance unattended or near children.
- Never use the appliance on wet hair.
- Do not leave the appliance unattended.
- Check the mains voltage according to the voltage specified on the rating plate.
- Never leave the hot appliance near towels or other textiles.

#### Never switch on the appliance when:

- The appliance or the power lead is damaged.
- The device has been dropped, shows visible damage or is not functioning properly
- The appliance is damaged to such an extent that electrical parts are exposed. Whenever this is the case, disconnect immediately from the power supply and contact the place of purchase.

Please note that the manufactures 12-month warranty covers parts failure only and does not cover accidental damage or excessive wear or tear.

#### Unplug the appliance from the power supply when:

- A defect occurs during operation.
- You wish to clean the appliance.
- The application power switch is in OFF position.
- The appliance is not being used.

#### Attention!

- Risk of burns! Avoid contact with skin during or after use until the plates have cooled down.
- When in use, the power cable should not be allowed to come into contact with the heating plates or other hot surfaces.
- Do not wind the power cable around the appliance, as this can break the cable!
- When in operation only place the appliance on plain, heat resistant surfaces.



## SAFETY INSTRUCTIONS

hh simonsen®

- This appliance is designed for indoor use indoors. Do not use outdoors e.g. in a garden or terrace etc.
- Make sure the appliance has completely cooled down before storing it.
- Do not use the appliance near fire or flammable liquids such as gasoline, linoleum etc.

### Note

This appliance has been designed for commercial use. However, it can be used in either commercial or domestic environments. Care should be taken to ensure that the user has read and understand the safety instructions.

### 2. Preparing the appliance for use

1. Plug the appliance into the power socket.
2. Touch the ON/OFF button to turn on the styler.
3. If you wish to lock the styler, press the ON/OFF button quickly while the styler is turned on. To unlock it, press again.

4. Select your desired temperature setting. You can choose one of the standard settings or reach a specific temperature using '+' and '-'.
5. When the styler is heating or cooling, the display background will be white. When the selected temperature is reached, the display will turn blue.
6. Iron goes into sleep-mode after 60 minutes.
7. To turn off the styler, touch the ON/OFF button for 2-3 seconds.

### Selecting the appropriate temperature

Your HH Simonsen® styler has a fully adjustable temperature control ranging from 80-210°C. Use '+' to increase the temperature. The temperature interval for each touch is 5°C. To reach the maximum temperature, press '+' for a couple of seconds. Touch '-' to lower the temperature.

The styler has three preset temperature settings for fine, medium and coarse hair, however you may select other heat settings within this range.

Touch 'M' to set a specific temperature mode. There are three modes to choose from according to your hair type and structure.

Touch 'M' x 1 = LCD display shows '180°C Fine'  
Touch 'M' x 2 = LCD display shows '200°C Medium'  
Touch 'M' x 3 = LCD display shows '210°C Coarse'  
Touch 'M' x 4 = return to home page

The light on the inside cover will blink until the selected temperature is reached.

### LCD display

When the styler is heating or cooling, the display background will be white.

### Straightening:

1. Wash the hair, dry it and comb through well.
2. Apply HH Simonsen® protection product in damp hair.
3. Separate a 2-inch section. The thinner the section, the more intensive the straightening.
4. Carefully place the section between the heating plates.
5. Now draw the straightening iron from the hairline to the end of the hair. Never rest for more than 2 seconds in any one place (especially when using the hotter settings).
6. Repeat the process with this section until the desired effect is achieved.
7. Repeat step 3-5 with the remaining sections.
8. Turn off the styler and disconnect from the power supply when you have finished the treatment.
9. Allow the straightening iron to cool down completely before storing.

### Creating curls:

1. Wash the hair, and comb through well.
2. Apply HH Simonsen® Heat Protection Spray in damp hair, and dry it.
3. Separate a 2-inch section. The thinner the section, the more intensive the result.
4. Place the straightening iron as close to the roots as possible and slide through the hair slowly in a downward motion, simultaneously twisting and turning the iron.

**Tip:** Do not curl too quickly. Curling each section once and slowly will give a far better result than curling each sections quickly multiple times.

### Other styling options

Your HH Simonsen® straightening iron gives you unlimited styling options.

In addition to straightening and curling hair you can also create flicks, twists, twirls and much more! And don't forget that your HH Simonsen® straightening iron is perfect for men's styling too.

### 3. Cleaning and Care

To ensure that your HH Simonsen® product remains in good working condition, clean the appliance regularly. This will remove the residue of hair products that can eventually coat the heating plates. Use a cotton cloth – wrung in soap water if necessary – to clean the plates. Do not use water.

**Important:** Before cleaning, ensure the appliance is unplugged. The plates must be cold during cleaning. The appliance must be completely dry before using it again.





## WARRENTY

### 4. Disposal

Equipment that has come to the end of its service life should undergo correct disposal in accordance with the law. Plastics and electronic parts should be submitted for recycling. Please enquire at your municipal waste disposal site.

### Weee

WEEE is short for 'Waste from Electrical and Electronic Equipment' and is used across the EU as a common designation for such waste.

### Warranty

All HH Simonsen® products are covered by a 12 month warranty. Please retain your original purchase receipt or invoice as a proof of date of purchase. The defective iron must be returned to the original place of purchase in its original packing and along with this warranty as well as the proof of purchase.


The guarantee is only valid if the appliance has been operated in strict accordance to the safety instructions.

### 5. Warranty Exclusions

- Damages caused by normal wear and tear including chips, scratches, abrasions, discolorations or fading and damage to the power cord.
- Damages caused by careless or improper transportation.
- Damages caused by misuse, or improper voltage or cleaning.
- Damages caused by negligence, disassembly or dropping.
- Damages caused by reparation or alteration which is not from the original manufacturer or its authorized agents.

- Any other damage which are not caused due to materials or workmanship.
- Damages on plates.

HH Simonsen® cannot be held responsible for damaged hair or extensions.

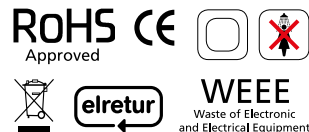



### Tak fordi du valgte dette HH Simonsen® produkt

Infinity Styler er et eksklusivt glattejern til dig, der ikke vil på kompromis. Dig, som stiller høje krav til din styling og elsker følelsen af luksus i hverdagen. Glattejernet har en række specialfunktioner, som giver dig en ekstraordinær styling-oplevelse – bl.a. touch display og memory-funktion med mulighed for at vælge indstillinger til henholdsvis fint, medium og kraftigt hår.

Vi håber, at du bliver glad for din nye styler.

### Produktinformation

Temperaturen på Infinity Styler kan indstilles mellem 80°-210° C. Glattejernet har tre standard temperatur-indstillinger til henholdsvis fint, medium og kraftigt hår. Det gør, at du nemt kan vælge den indstilling, der passer til din hårtype.

Glattejernet opnår den ønskede temperatur inden for kun fem sekunder.

Efter 60 minutter går glattejernet automatisk i 'sleep mode', hvilket betyder, at pladerne afkøles og dermed ikke udgør nogen brandfare.

Glattejernet's dobbelte titanium-coatede plader med olie og turmalin beskytter mod skader og sikrer dig et glat og silkeblødt resultat efter bare ét strøg. Den er desuden udviklet med en ion-teknologi, som forsegler hårets naturlige fugt og modvirker krus og statisk elektricitet.

Glattejernet's 'floating plates' er specielt udviklet af HH Simonsen® og sikrer en perfekt plade-til-hår kontakt – uanset hvilken vinkel, du styler i. Dette gør ligeledes glattejernet perfekt til at style et look med bevægelse og krøller.

Som prikken over i'et sikrer den tre meter lange 'soft rubber' ledning, at glattejernet kan nå stikkontakten, selvom den ikke er lige foran spejlet.

### Strømforsyning:

110-240V~, 50/60Hz, 50W Dual Voltage.

### 1. Sikkerhedsanvisninger

Før glattejernet tages i brug, bør du læse disse instruktioner nøje. Anvisningerne er udarbejdet for at hindre ukorrekt brug og sikkerhedsrisici. HH Simonsen® kan ikke holdes ansvarlig for direkte eller indirekte skader forvoldt på grund af forkert brug eller misvedligehold af glattejernet.

#### 1.1. Forklaringsliste

I sikkerhedsbestemmelserne vil du støde på en række anvisninger, som er forklaret herunder.

**Fare: Høj risiko!** Efterkommes denne advarsel ikke, kan det være dødbringende eller resultere i personska-

**Fare: Middel risiko:** Efterkommes denne advarsel ikke, kan det resultere i personska-

**Fare: Lav risiko:** Disse sikkerhedsinformationer skal huskes og bruges, når glattejernet er i brug.

### 1.2. Generel sikkerhed

**Fare: Høj risiko!**

- Glattejernet må kun anvendes på menneskehår.
- Glattejernet må ikke anvendes på kunstigt hår eller dyrehår.
- Brug ikke varmeelementerne til at tørre/glatte andre objekter
- Glattejernet må ikke anvendes i badekarret, brusebadet eller over en fyldt håndvask eller andre beholdere med væske.
- Glattejernet må ikke anvendes med fugtige eller våde hænder.

- Glattejernet må ikke komme i kontakt med vand, da dette kan skade apparatet og/eller medføre alvorlig personska-
- Glattejernet skal holdes tørt hele tiden.
- Glattejernet må ikke anvendes på vådt hår.
- Glattejernet må ikke efterlades uden opsyn eller i nærheden af børn, når ledningen er i stikket.
- Tjek altid stikkontaktens spændingseffekt (volt), så den passer til produktets elektriske specifikationer.
- Placér aldrig det tændte apparat i nærheden af håndklæder, andre tekstiler eller andre brandbare materialer.

### Tænd aldrig for glattejernet når:

- Apparatet eller ledningen er beskadiget.
- Apparatets elektriske dele kan ses. Hvis dette er tilfældet, skal du straks slukke for stikkontakten og aflevere det der, hvor det er købt. Husk din købskvittering.

Bemærk, at garantien bortfalder, hvis apparatet er misvedligeholdt eller anvendt i strid med vores retningslinjer.

### Fjern ledningen fra stikkontakten såfremt:

- Apparatet er defekt under brug.
- Apparatet skal rengøres.
- Apparatet står på OFF.
- Apparatet ikke bruges.

### Fare!

- Risiko for forbrænding! Undgå kontakt med huden, indtil apparatet har kølet ned, da dette kan forårsage brændmærker.
- Lad ikke apparatet eller ledningen komme i forbindelse med varmepladerne eller andre meget varme kilder, som f.eks. kogeplader.
- Rul ikke ledningen rundt om apparatet, da ledningen kan knække.
- Placér altid apparatet på en fast, ikke-brændbar overflade.
- Apparatet må kun anvendes indendørs.
- Apparatet skal altid nedkøle, inden det pakkes sammen til opbevaring.



- Efterlad aldrig apparatet tændt, og fjern altid stikket fra stikkontakten efter brug.
- Træk ikke stikket ud af stikkontakten med unødvendig styrke.
- Brug ikke glattejernet i nærheden af ild eller let-antændelige materialer såsom benzin, gas, fortynder-væsker, linolie, sprays etc.

### Bemærk

Glattejernet er designet til professionelt brug. Brug derfor kun glattejernet i det miljø, som en professionel frisør ville gøre. Glattejernet må ikke anvendes udenfor eller i vådrum, samt ved temperaturer under 10 grader.

### 2. Brug af glattejernet

1. Sæt ledningens stik i stikkontakten.
2. Tænd glattejernet ved at røre ON-knappen.

3. Hvis du ønsker at låse glattejernet, gøres dette ved igen at røre på 'ON', når glattejernet er tændt. Gentag for at låse den op igen.
4. Vælg den ønskede temperatur-indstilling. Du kan vælge en standardindstilling eller skrue op og ned med '+' og '-'.  
5. Når glattejernet er i gang med at varme op eller nedkøle, vil display-baggrunden være hvid. Når den ønskede temperatur er opnået, bliver den blå.
6. Apparatet går i 'sleep-mode' efter at have været tændt i 60 minutter.
7. Tryk på OFF-knappen for at slukke for glattejernet.

### Temperaturindstilling

Tænd apparatet og indstil temperaturen mellem 80-210°C. Brug '+' for at skrue op for temperaturen og '-' for at skrue ned. For hvert tryk stiger/reduceres temperaturen med 5 grader. Tryk '+' i et par sekunder for hurtigt at opnå maksimum temperaturen.

Du kan indstille temperaturen manuelt, eller du kan vælge mellem tre standardindstillinger til henholdsvis fint, medium og kraftigt hår.

'M' x 1 = LCD display viser '180°C Fine'

'M' x 2 = LCD display viser '200°C Medium'

'M' x 3 = LCD display viser '210°C Coarse'

'M' x 4 = tilbage til start

Lampen på indersiden vil blinke, indtil den valgte temperatur er nået.

### LCD display

Når styleren varmer op eller køler ned, vil displayets baggrund være hvidt. Når glattejernet har opnået den ønskede temperatur, bliver displayet blå.

### Sådan glatter du håret:

1. Vask og red håret.
2. Brug HH Simonsen® Heat Protection Spray for at beskytte håret under stylingen. Føntør håret.
3. Opdel håret i mange små sektioner. Jo tyndere sektionerne er, desto glattere resultat.
4. Placer forsigtigt en hårsektion mellem glattejernets plader.
5. Træk glattejernet langsomt ned af hårlokken, fra tæt ved hårbunden og ud til spidsen. Lad aldrig glattejernet hvile på håret i mere end to sekunder.
6. Gentag, indtil du opnår den ønskede effekt.
7. Gentag trin 3-5 på hele håret.
8. Sluk glattejernet, og træk stikket ud.
9. Lad glattejernet køle ned, inden du pakker det væk.

### Sådan laver du krøller:

1. Vask, føntør og red håret.
2. Brug HH Simonsen® Heat Protection Spray for at beskytte håret under stylingen.

3. Inddel håret i små sektioner. Jo tyndere sektionerne er, desto større effekt.
4. Placer glattejernet så tæt på hovedbunden som muligt (men pas på ikke at brænde dig). Lad glattejernet glide langsomt ned af håret, imens du drejer det i retningen væk fra dit ansigt. Tip: Lav ikke for hurtige bevægelser. Du får en bedre effekt, hvis du krøller hver sektion én gang langsomt.

### 3. Rengøring af glattejernet

Pladerne skal rengøres for skidt (hårlak, gele, skum m.m.), som brænder sig fast under brug, med jævne mellemrum. Pladerne skal rengøres med en ren bomuldsklud. Bomuldskluden kan vrides hårdt op i en let sæbeopløsning for at opløse produktrester.

**Bemærk:** Pladerne skal være kolde, inden rengøringen kan finde sted. Apparatet skal være helt tørt, inden det igen kan anvendes og må tidligst tændes en time efter afsluttet rengøring.

**Bemærk:** Glattejernet kan ved brug ændre farve på plastikoverfladerne omkring pladerne samt andre steder, som bliver påvirket af varmen. Disse ændringer i farven er ikke omfattet af garantien.

HH Simonsen® forbeholder sig ret til at ændre i specifikationerne eller på produktet uden forudgående varsel.

### 4. Bortskaffelse

Elektriske apparater skal bortskaffes i overensstemmelse med gældende love og regler. Er du i tvivl, kan du søge råd på din lokale genbrugsplads.

### Weee

Apparatet skal bortskaffes i henhold til WEEE-bekendtgørelsen. WEEE står for 'Waste from Electrical and Electronic Equipment' og gælder i EU.



## BRUGERVEJLEDNING OG SIKKERHED

### 5. Garantibestemmelser


Opstår der problemer med dit glattejern, skal det indleveres hos forhandleren. Husk, at medbringe kvittering eller andet købsbilag. Bemærk: Glattejern, hvor pladerne ikke er rensed og vedligeholdt efter vores anvisninger er ikke omfattet af garantien.

#### Garantien omfatter ikke:

- Skader, som skyldes normal slidtage såsom ridser på pladerne, ridser på plastikdelene, farveændringer eller skade på ledningen.
- Skader, som skyldes upassende forsendelse.
- Skader, som skyldes uhensigtsmæssig rengøring.
- Skader, som skyldes forkert spænding og strømtilslutning.
- Skader, som skyldes tab af apparatet, slag eller lignende.
- Skader, som skyldes egne reparationer eller reparationer udført af en ikke-autoriseret reparatør.

- Skader, som med skøn ikke er produktionsfejl.
- Skader på plader, som ikke kan henvises til produktionsfejl.

HH Simonsen® kan ikke holdes ansvarlig for ødelagt hår eller extensions.

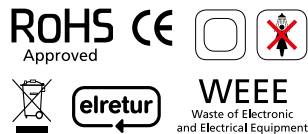



[www.hhsimonsen.dk](http://www.hhsimonsen.dk)